


DYNAVOICE

EXPERIENCE THE NORDIC SOUND

User manual

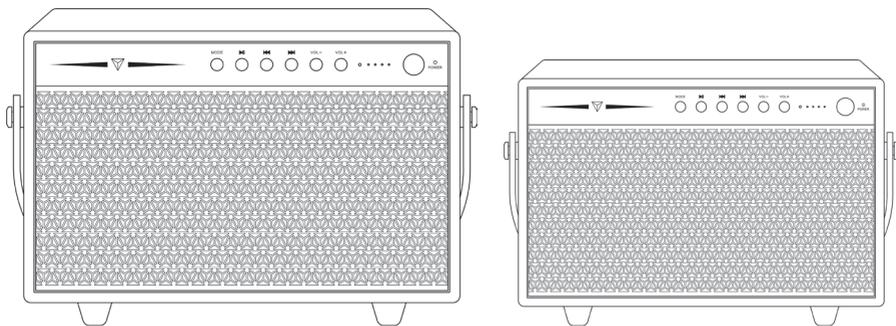

Model: CL-15A & CL-14A



Experience the Nordic Sound

In the middle of Sweden right next to lake Hjälmarens lies Örebro. It is known for its live music scene, rich nature and beautiful city centre with the majestic castle towering the many restaurants and the buzzing night life. This is where we design and engineer Dynavoice.

The Dynavoice logo is a quality stamp. It guarantees that what you now have in your possession comes from a passion for music and sound with you, the listener, in focus.

Through our different products you will discover 'the Nordic Sound', a warm and powerful, yet detailed and natural sound that over the years has become synonymous with Dynavoice.

We want you to discover new details in your favourite songs, and experience new dimensions when you re-watch your favourite movies with a Dynavoice multichannel sound system. We love what we do, and we want you to hear and feel our passion and dedication through our speakers.

Thank you for choosing Dynavoice, and enjoy listening to the Nordic Sound.

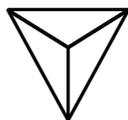


Table of content


Important safety information	s.3
Unpacking	s.4
Controls	s.4
Inputs / Outputs	s.5
Operation instructions	s.5
Turning the power ON/OFF.....	s.5
Charging the battery.....	s.5-6
Choosing your source.....	s.6
Play music via Bluetooth.....	s.6
Play music via USB storage.....	s.7
Play music via AUX.....	s.7
Volume control.....	s.7
Playback control.....	s.8
Charging external devices.....	s.8
Technical specifications	s.9
Dynavoice Classic CL-14A	s.9
Dynavoice Classic CL-15A	s.9

Important safety information

Please read this information thoroughly in its entirety, heed all warnings, follow all instructions and keep this manual for further use.



This symbol indicates that there are important operating and maintenance instructions in the manual that is included with the product.

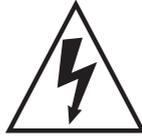

This symbol indicates that there is dangerous voltage constituting a risk of electric shock present within the product.



To reduce the risk of electric shock do not remove cover (or back).

No user-removable parts inside. Refer servicing to qualified personnel only.



When a cart is used for transportation, use caution when moving the cart to avoid injury from tip-over.

This product shall not be used near water or in any moist environments. Do not block any openings or ventilations. Clean only with a dry cloth. Do not install near any heat sources such as radiators, stoves, or other apparatus that produce heat. Do not expose for direct sunlight during extensive periods, operating temperature 5-40 degrees celcius. Do not insert any plugs in to the unit if the plugs or cords are wet or moist.

Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit the product. Unplug this product during lightning/thunder storms.

All Dynavoice products are designed and manufactured to meet the highest quality standard. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as if the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. No user serviceable parts are included inside this product, please refer all servicing to a qualified engineer.


Design and specifications are subject to change without notice.

Unpacking


When you unpack your new Dynavoice speaker, please do it with care. In case the product involves heavy lifting or if it is too big for one person to handle – make sure to have assistance, we do not want you to break the product or yourself.

When life happens and you move to a new home, you will want to take your Dynavoice products with you. The easiest way to do this is in the original packaging so if possible - keep the box and the packing material.

The box contains:

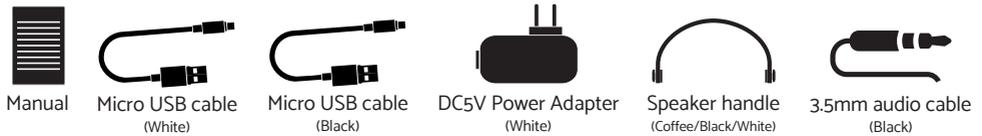


Controls

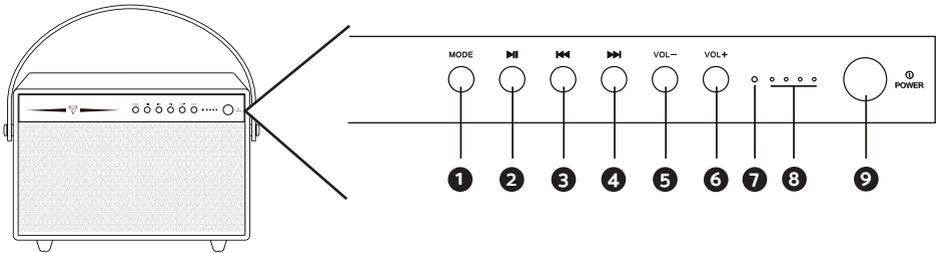

- 1. Mode selection button
- 2. Play / Pause button
- 3. Previous button
- 4. Next button
- 5. Volume down button

- 6. Volume up button
- 7. LED indicator
- 8. Battery LED indicators
- 9. Power button

Inputs / outputs

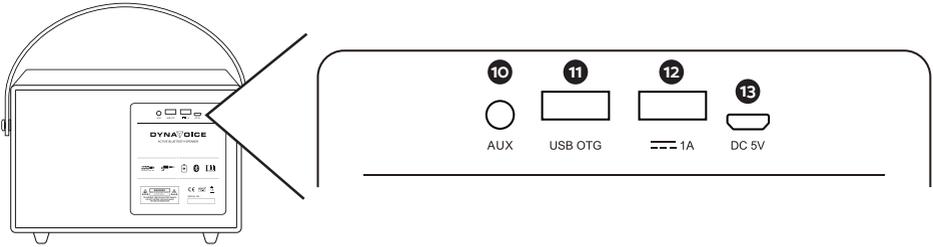

10. AUX (3.5 mm) audio input jack

11. USB input jack

12. USB 5V/1A output jack

 
13. Micro USB charging input jack

Operation instructions

Turning the power ON/OFF

ON: Press the POWER button (9) on the front panel.

OFF: Quickly press the POWER button (9) twice.



Please note that the unit should be fully charged before being used the first time.

 
Charging the battery

The built-in battery on CL-14A and CL-15A can play at 50% volume for about 15 hours. Charging the battery to its full capacity takes 3 to 4 hours when using the included DC5V power adaptor.

There are four battery LED indicators (8) on the front panel that lets you know the current battery charge level. If one single LED is flashing the battery capacity is less than 25% and the unit needs to be charged.

(see the following page for further instructions)

Charging the battery



LED State	● ● ● ●	● ● ● ○	● ● ○ ○	● ○ ○ ○	☀ ○ ○ ○
State introduction	Quantity of electric charge 100%	Quantity of electric charge between 75% ~100%	Quantity of electric charge between 50% ~75%	Quantity of electric charge between 25% ~50%	Quantity of electric charge below 25%
● Light on ○ light off ☀ flashing					

 
To charge the unit, connect the Micro USB charging cable to the included DC5V power adaptor and plug it in to a power socket, then connect the Micro USB connector to the charging input jack (13) on the back of the unit.

The battery LED indicator (8) starts to flash, indicating that the battery is charging.

When all 4 battery LED indicators (8) are lit and stop flashing the battery is fully charged.

Choosing your source

Press the “MODE” button (1) to select source. The LED indicator (7) will change colour depending on the selected source: Blue = Bluetooth, Purple = USB and Red = AUX.



- Blue = Bluetooth
- Purple = USB
- Red = AUX

Play music via Bluetooth

Use your Bluetooth-compatible device (tablet, smartphone, computer) to stream music directly to your CL-14A/CL-15A.


Press the “MODE” button (1) to select Bluetooth (Blue LED indicator). The blue LED indicator will flash until a Bluetooth-compatible device is paired.

To pair a Bluetooth-compatible device, enable the Bluetooth function and select CL-14A / CL-15A, when paired the LED indicator (7) will stop flashing and turn to a steady blue.

To disconnect the speaker from the Bluetooth-compatible device, press and hold the PLAY/PAUSE button (2) for more than 3 seconds.

Play music via USB storage

Insert the USB storage with playable music files* in to the USB input jack (11), the CL-14A/CL-15A will automatically start playing music. If a different source is selected, press the “MODE” button (1) until the purple LED light comes on.

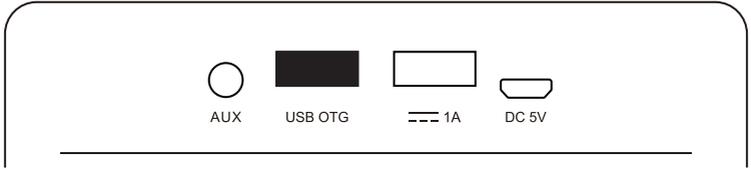


Please note that if no USB storage is plugged in to the USB input jack (11) or if no songs are playable, the USB audio source cannot be selected.

*Playable music formats are: MP3, WMA, WAV, FLAC and APE (FLAC and APE only identifiable with a sample rate no higher than 16 bits).

Play music via AUX


CAUTION!! Make sure that the volume is turned down on the CL-14A / CL-15A and the connecting unit before you connect them, disregarding this advice may permanently damage the product.

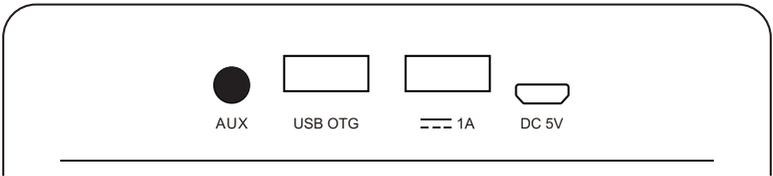

Use the included 3.5mm audio cable to connect an external device to the AUX input jack (10). Press the “MODE” button (1) until the LED indicator (7) turns red confirming AUX has been selected as sound source.

Volume Control

 
To adjust the volume press the “VOL-“ (5) or “VOL+“ (6) button. To quickly adjust the volume, hold down the respective button.



Each press on the volume button will get a single flash confirmation from the LED indicator (7). When the volume reaches minimum or maximum, the LED indicator will flash 2 times to indicate an invalid operation.

Playback Control

 Press the PLAY/PAUSE button (2) to play and pause audio. Press PREVIOUS button (3) to skip track backwards and press NEXT button (4) to skip track forward.



Note: When playing music from an AUX source (10): the PREVIOUS button (3) and NEXT button (4) are not in use. The PLAY/PAUSE button (2) can be used to mute/unmute the music.

Charging external devices

The USB 5V/1A output jack (12) is a DC5V 1A port that can be used to charge external devices such as smartphones, tablets, MP3 players etc. After you plug in the external device through a USB cable in the USB 5V/1A output jack (12), look at the external device to see that it indicates to be charging.



Technical specifications

Dynavoice Classic CL-14A

Type: Two-way bass reflex Bluetooth speaker
Frequency Response: 60Hz-20kHz (+/-3dB)
RMS output power: 25W
Drivers Woofer: 4" coated paper cone
Drivers Tweeter: 1" silk dome
Bluetooth version: 5.0
USB decoder: Yes

3.5mm audio input: Yes
DC5V charge output: Yes
Lithium battery: 3,7V 6000mAh
Play time: >15 hours (50% volume)
Remaining battery indicator: Yes
Dimensions: 257 x 141 x 178mm
Net weight: 2,5 kg

Dynavoice Classic CL-15A

Type: Two-way bass reflex Bluetooth speaker
Frequency Response: 50Hz-20kHz (+/-3dB)
RMS output power: 30W
Drivers Woofer: 5" coated paper cone
Drivers Tweeter: 1" silk dome
Bluetooth version: 5.0
USB decoder: Yes

3.5mm audio input: Yes
DC5V charge output: Yes
Lithium battery: 3,7V 8000mAh
Play time: >15 hours (50% volume)
Remaining battery indicator: Yes
Dimensions: 297 x 160 x 210mm
Net weight: 3,2 kg



All Dynavoice products complies with the relevant provisions of the RoHS Directive for the European Union. In common with all Electrical and Electronic Equipment (EEE) the Dynavoice product should not be disposed of as household waste. Alternative arrangements may apply in other jurisdictions.



The crossed-out wheeled bin symbol means that the product, literature and packaging included must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste; take them for recycling. For info on your nearest recycling point, check with your local waste authority.



The CE mark indicates that the product has passed corresponding conformity assessment procedures and the manufacturer's declaration of conformity, and it complies with the relevant EU directives. It is used as a pass for the product to be allowed to enter the European Community market.

 **winn**
scandinavia

©2021, Winn Scandinavia AB

Dynavoice and Experience the Nordic Sound are trademarks of Winn Scandinavia AB, registered in Sweden and other countries.

Winn Scandinavia reserves for possible typos, factual or numeric errors that may have been printed on any products, package designs, user manuals and/or other included accessories.

Thank you for choosing Dynavoice!

DYNA**VOICE**

For further information and contact, please visit our website dynavoice.se, or our
Facebook page facebook.com/Dynavoice.